

•FEATURES

- N.1 serial interface RS-485 Modbus RTU Master
- N.1 serial interface RS-485/232 Modbus RTU Slave
- N.1 slot for microSD card
- Interface Ethernet 10Base-T, Modbus TCP
- Functional Block programming software
- Remotely programmable
- Connection by removable screw-terminals
- LED signalling for Link/Act Ethernet, serial RX-TX, power supply
- Galvanic Isolation on all the ways
- EMC compliance – CE mark
- Suitable for DIN rail mounting in compliance with EN-50022 standard



GENERAL DESCRIPTION

The device DAT9000 DL is an Intelligent unit able to control a network of slave Modbus RTU devices connected on serial line RS-485 Master executing the reading and writing of the field values and performing the logical and mathematical functions necessary for the system working, managing up to 8 task of recording memorized on files saved on the microSD card .

By means of the Ethernet interface or the RS-485 “SLAVE” or RS-232 ports it is possible to read and write, in real time, the internal registers value. By Ethernet it is possible to get access to the files saved on the microSD card when the Data-Logger function is active.

Moreover, by means of the Ethernet interface, or by the RS-485 “SLAVE” or RS-232 ports it is possible to:

- Programming of the Control Logic
- Monitor, request of data, programming in real time the Intelligent Unit
- Direct programming and request of data from the Slave devices connected on the RS-485 Master.

The device DAT9000 DL is configurable by the software DEV9K, an easy and intuitive free IDE developed by DATEXEL and running under Windows.

The device DAT9000 DL realizes a full electrical isolation between the lines, introducing a valid protection against the effects of all ground loops eventually existing in industrial applications.

LED signalling of Ethernet activity and data rx-tx flow on the serial line allows a direct monitoring of the system functionality. The connection is made by removable screw-terminals (supply and RS-485) and RJ45 plug (Ethernet and RS-232).

The DAT 9000 DL is in compliance with the Directive 2004/108/EC on the electromagnetic compatibility.

The device is housed in a rough self-extinguishing plastic enclosure which, thanks to its thin profile of 22.5 mm only, allows a high density mounting on EN-50022 standard DIN rail.

LIST OF SUPPORTED FUNCTION

- Communication: - Read data from “slave” devices (Modbus function 04)
- Write data to “slave” devices (Modbus function 16)
- Logical: - Boolean(And, Or,)
- Compare (>, <, =,)
- Arithmetical (Sum, Subtraction, Multiplication, Division)
- Process: - Calculation (Scaling, Exponential functions, Square root extraction, Arithmetic mean,)
- Conditional statements (IF)
- Flow control (Goto, Call,)
- Scheduler: - Data-Logger

For the complete list of functions and their operation, refer to the Programming software User Guide.

TECHNICAL SPECIFICATIONS (Typical @ 25 °C and in the nominal conditions)

In compliance with Ethernet IEEE 802.3 EIA RS485 and RS232		Power supply	10 ÷ 30 Vdc
Network interface		Current consumption	45 mA typ. @ 24Vdc (standby) 80 mA max
Protocol	Ethernet 10Base-T Modbus TCP	Isolations	
RS485 Interface		Power supply / Ethernet	1500 Vac, 50 Hz, 1 min.
Baud-rate	up to 38.4 Kbps	Power supply / RS485	1500 Vac, 50 Hz, 1 min.
Max. distance (recommended) (1)	1,2 Km @ 38.4 Kbps	Ethernet / RS485	1500 Vac, 50 Hz, 1 min.
Number of modules in multipoint	up to 32	EMC (for industrial environments)	
Internal termination resistance (optional)	120 Ohm	Immunity	EN 61000-6-2
Compatible SD card		Emission	EN 61000-6-4
Type	microSD	Temperature & Humidity	
Memory size	Up to 8 GB	Operative temperature	-20 ÷ +60 °C
Format	FAT16 or FAT32	Storage temperature	-40 ÷ +60 °C
		Relative humidity (not cond.)	0 ÷ 90 %
		Connections	
		Ethernet	RJ-45 (on terminals side)
		RS-232D	RJ-45 (on front side)
		RS-485 / Supply	Removable screw terminals
		Card	microSD card slot
		Housing	
		Material	Self-extinguishing plastic
		Mounting	DIN rail EN-50022
		Dimensions in mm.(WxHxT)	100 x 120 x 22.5
		Weight	about 160 gr.

(1) – The maximum distance depends of: number of devices connected, type of cabling, noises, etc...

INSTALLATION INSTRUCTIONS

The Intelligent Unit DAT9000 DL is suitable for fitting to DIN rails in the vertical position.

For optimum operation and long life follow these instructions:

When the devices are installed side by side it may be necessary to separate them by at least 5 mm in the following case:

- If panel temperature exceeds 45°C and high power supply value(> 27Vdc).


Make sure that sufficient air flow is provided for the device avoiding to place raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel. Install the device in a place without vibrations.

Moreover it is suggested to avoid routing conductors near power signal cables (motors, induction ovens, inverters, etc...) and to use shielded cable for connecting signals.

MODBUS REGISTERS MAPPING

Register	Description	Access
%S0	--Reserved--	R/W
%S1	Firmware [0]	R
%S2	Firmware [1]	R
%S3	Name [0]	R/W
%S4	Name [1]	R/W
%S5	Port 1 [BaudRate]	R/W
%S6	Node ID	R/W
%S7	Port 1 [Timeout RX]	R/W
%S8	--Reserved--	-
%S9	--Reserved--	-
%S10	System Flags	R/W
%S11	--Reserved--	-
%S12	--Reserved--	-
%S13	PC	R
%S14	Status [0]	R
%S15	Status [1]	R
%S16	COM Errors	R/W
%S17	Gateway Mask [L-H]	R/W
%S18	Port 0 [Settings]	R/W
%S19	Port 0 [Settings]	R/W
%S20	Timers Enable	R/W
%S21	--Reserved--	-
%R22	--RTC(0)	R/W
%R23	--RTC(1)	R/W
%R24	--RTC(2)	R/W
%R25	--RTC(3)	R/W
%R26	General Purpose Registers	R/W
%R959		
%R960	Memory Registers	R/W
%R1023		

MECHANICAL DIMENSIONS (mm)

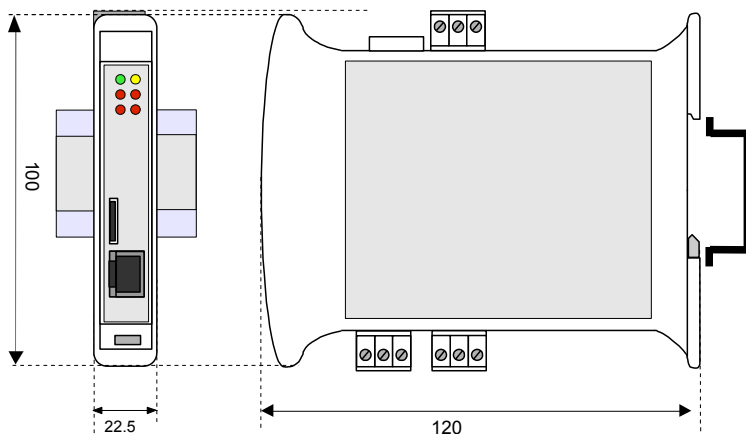

MicroSD card HANDLING

Warning: execute this operation only if necessary: to get access to the data on the card it is suggested, if possible, to use the Ethernet interface.

Insertion and removing

Power off the device.

Open the plastic door located on the front of the device.

Insert the card into the slot in the correct way and push the card to block it inside the connector; to extract the card, push slightly the card on the border to unblock the connector and pull out the card.


Close the plastic door located on the front of the device.

Power-on the device.


WIRING

SERIAL PORTS


RS-485 Slave (Port 0)

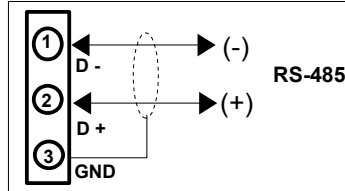


RS-485 Master (Port 1)

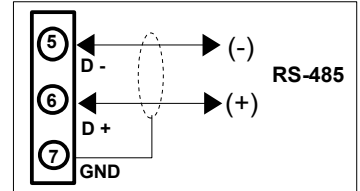


RS-232D Slave (Port 0)

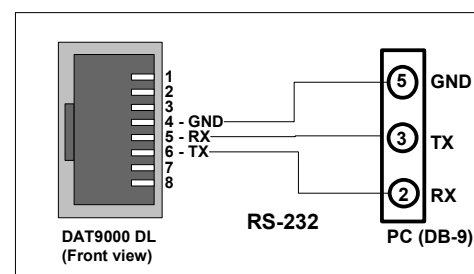


MicroSD card slot

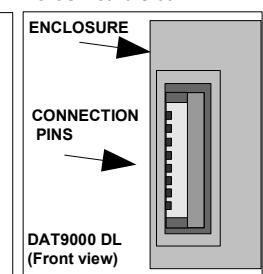

POWER SUPPLY

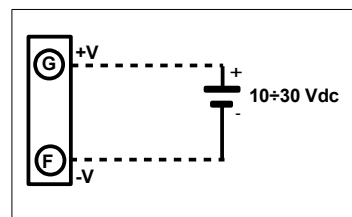

INIT

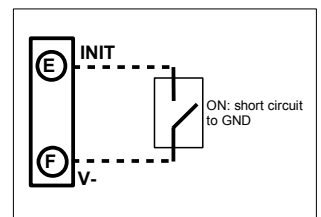

LIGHT SIGNALLING

LED	COLOR	STATE	DESCRIPTION
PWR	GREEN	ON	Device powered
		OFF	Device not powered / Wrong RS-485 connection
STS	YELLOW	BLINK	DEBUG Modality
		OFF	RUN Modality
RX1	RED	BLINK	PORT 0 – Data received (the blink frequency depends on Baud-rate)
		OFF	No reception in progress
TX1	RED	BLINK	PORT 0 – Data transmitted (the blink frequency depends on Baud-rate)
		OFF	No reception in progress
RX2	RED	BLINK	PORT 1 – Data received (the blink frequency depends on Baud-rate)
		OFF	No reception in progress
TX2	RED	BLINK	PORT 1 – Data transmitted (the blink frequency depends on Baud-rate)
		OFF	No reception in progress

HOW TO ORDER

“ DAT 9000 DL “

■ = Requested
□ = Optional